


OPERATING MANUAL

High Performance Hand Held Scanner DETAILS:

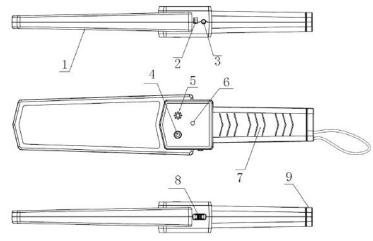

- 1. Detection Face
- 3. Sensitivity Switch
- 5, Audio Alert
- 7. Handle
- 9. Battery Lid

- 2. Rechargeable Battery Socket
- 4. LED(Green /Red Color)
- 6. Low battery indicator
- 8, On/Off(Audio/vibration)Switch

INTRODUCTION:

The SE-AT2008 is a high performance Hand Held Metal Detector designed to meet the exact requirements of the security industry. Typical uses will include body search for offensive weapons in crowd control, airport and border security, checking parcels and letters for metal objects and anywhere that hidden metal needs to be detected.

OPERATION:

- 1. The SE-AT2008 operates on one 9volt standard or rechargeable battery. To install the battery, slide off the battery cover and place the battery into its compartment while matching the \pm -symbols.
- 2. Turn the unit on by pushing the on/off switch until it clicks on and the green LED is lit. Switch (8) is a three-way switch, when it is in the middle, it means switching the power supply off. If it is at one side of the switch, it is sound alarm, while when it at the other side of the switch, it is vibration alarm.
- 3. Holding the unit with the detection face towards the surface, sweep backwards and forwards continuously at a height of 10-30 mm above the area to be scanned.

4. The presence of metal will be indicated by the audio warning tone and the red light coming on. If the detector is held still over a metal object the detection signal will automatically reduce, therefore it is important that the unit is continually scanning the surface when in use.

PERFORMANCE:

The sensitivity of the detector is determined primarily by the size, shape and composition of the object to be detected.

Typical performance figures are given below:

Object Maximum Detection Range

38 Caliber hand gun

Pen knife

Razor blade

20cm

15cm

10cm

SENSITIVITY OPERATION:

Sensitivity adjustment: Rotate the knob clockwise to increase the sensitivity and counterclockwise to decrease the sensitivity. When the sensitivity is too high, the detector will keep alarming. At this time, adjust the knob counterclockwise until it stops.

RECHARGEABLE BATTERY SOCKET:

- 1. You may use a 9 volt rechargeable battery to power the detector.
- 2. It takes four to six hours to fully charge the battery. The battery charger socket is located at the side of the detector.

Note: Turn off the detector when charging it.

VIBRATOR BUTTON:

Vibration function should be used in noisy work situations or in places where the operator does not wish for the audio tune to be heard in his surrounding area. **NOTE:**

- 1. If the green light goes out completely or fails to come on or if the unit is making unfamiliar audio tunes, the unit is unstable and should not be used until the battery is recharged or replaced.
- 2. If the unit is not to be used for a certain length of time it is advisable to remove the battery to avoid battery leakage which could cause serious damage to the detector.
- 3. When not in use, the detector should be stored in a dry warm environment.

SPECIFICATION:

Power Voltage 9V Standard or Rechargeable Battery

Power 270mW
Operating Frequency 22KHz
Operating Current <50mA
Operating Voltage 7V-9V

Operating Temperature -5C ° to +55C °

Net Weight 230G

Dimensions $41(L) \times 8.5(W) \times 4.5(H)$ cm

www.turnstilecenter.com