


PRODUCT MANUAL

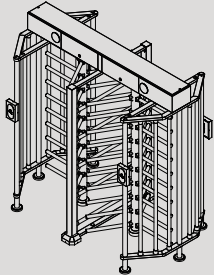

TS-FH21-2
FULL HEIGHT TORSTILE



www.turnstilecenter.com

TABLE OF CONTENTS

01 Assembly instruction


1. Check if all is complete as per spare part list	01
2.Middle fence assembling	05
3.Left/Right side fence assembling	07
4.Turning Part assembling	10
5.Conjoin the left side pillar and right side fence with bolts and screws	11
6. Lift the cabinet onto the conjoint stands and fix with screws and bolts	13

02 Installation instruction


1.Installation Requirement	14
2.Installation	15

01


Assembly instruction

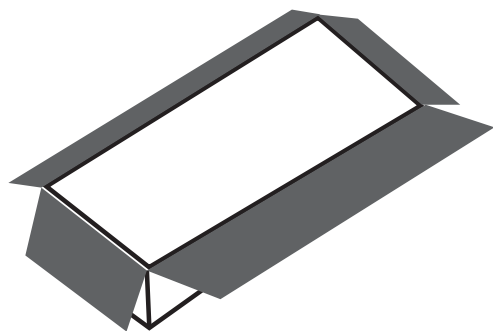


Unboxing

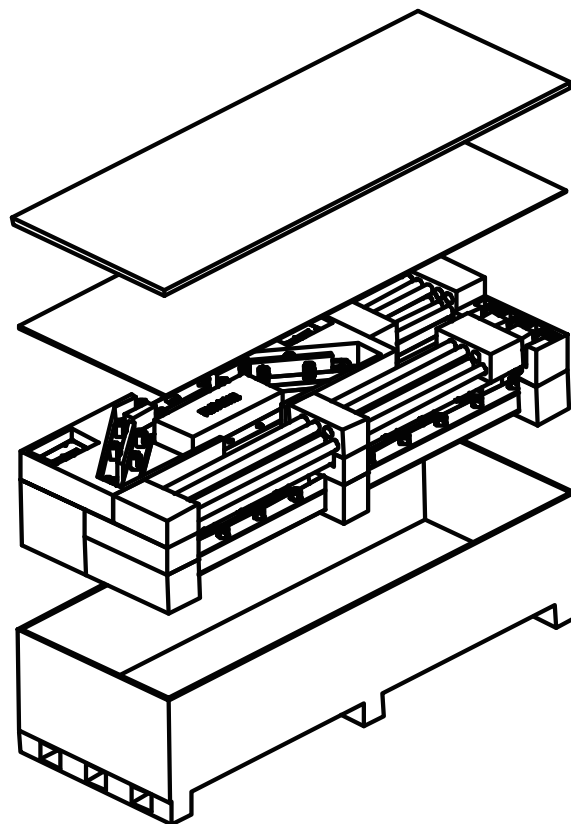


Spare part list






Model	pcs	Model	pcs	Model	pcs	Model	pcs	Model	pcs
①  M12	10	⑤  M6	22		2	A01 	2	B04 	4
①  M12	10	⑤  M6*20	22		2	A02 	1	B05 	12
①  M12*75	10	⑥  M4*16	24		2	A03 	1	B06 	2
②  M8	40		34		34	A04 	5	B07 	2
②  M8	40		60	 M12*100	26	B01 	2	C01 	2
②  M8*20	40		7	 glue	2	B02 	2	C02 	60
③  M8*25	36		3		2	B03 	2	D01 	1
④  M8*8	124		2	 plotting sheet	1				
⑤  M6	22		2						

Exploded view drawing

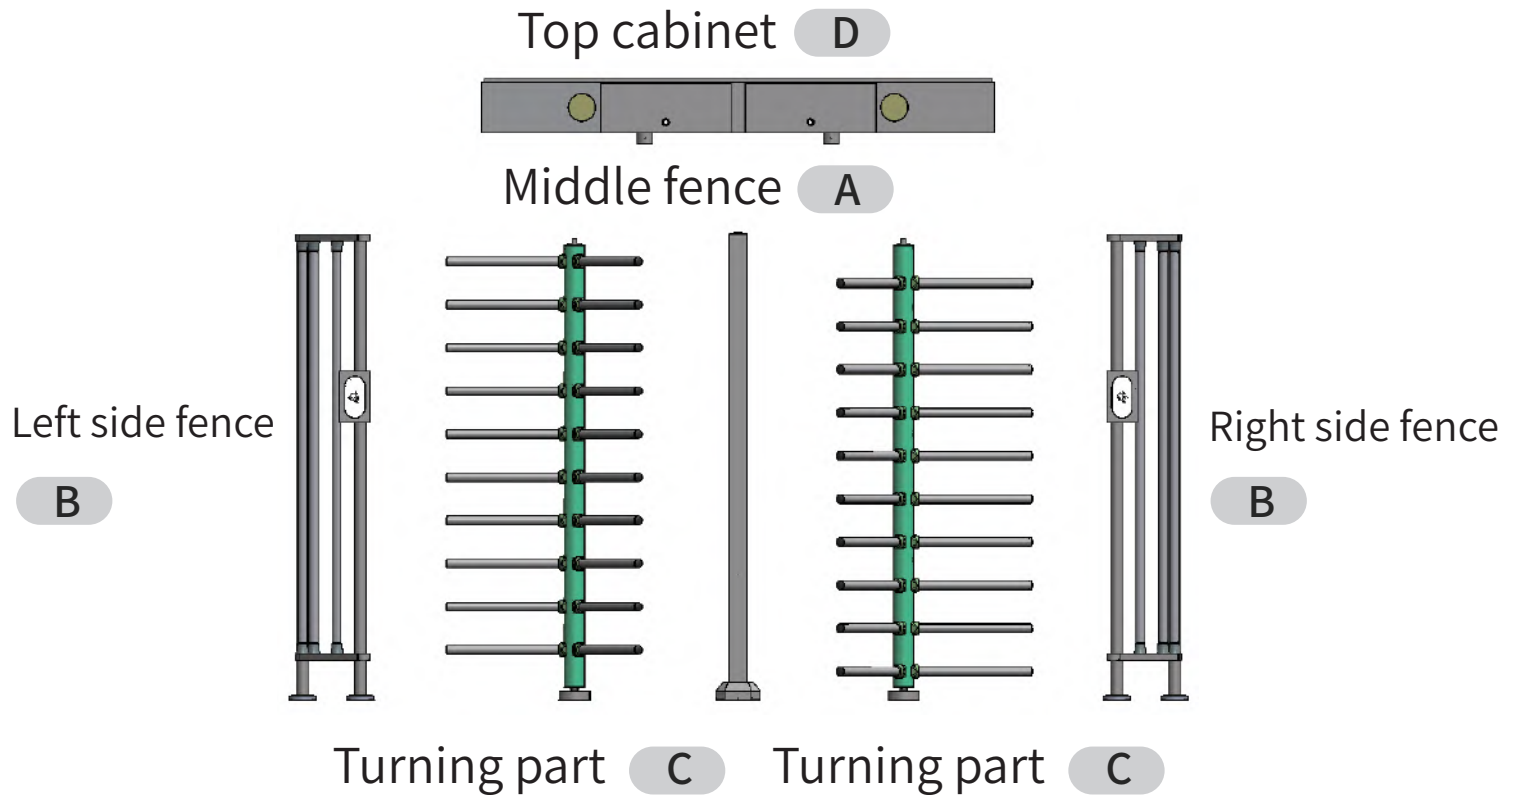


A Middle fence


- ③  × 10  × 10
 × 10  × 2
 × 2 ②  × 8
 A01  × 2
 A02  × 1
 A03  × 1
 A04  × 5

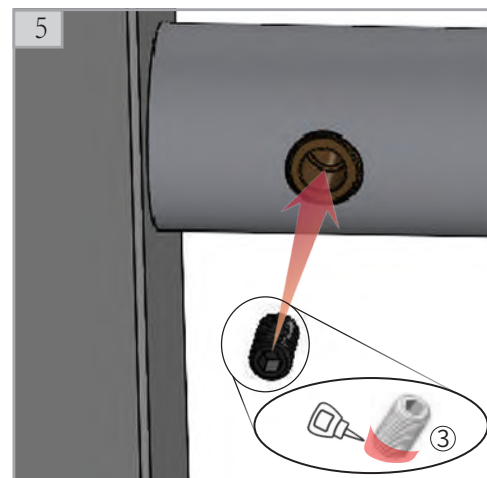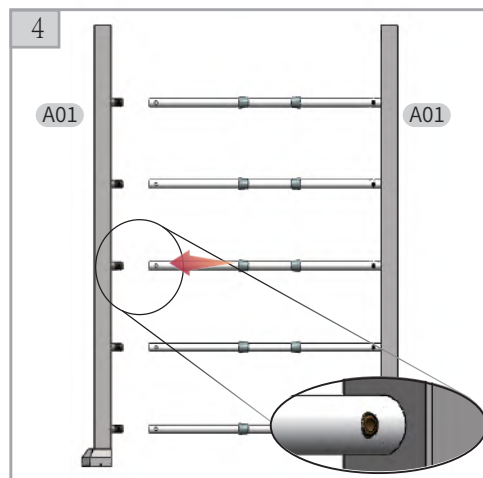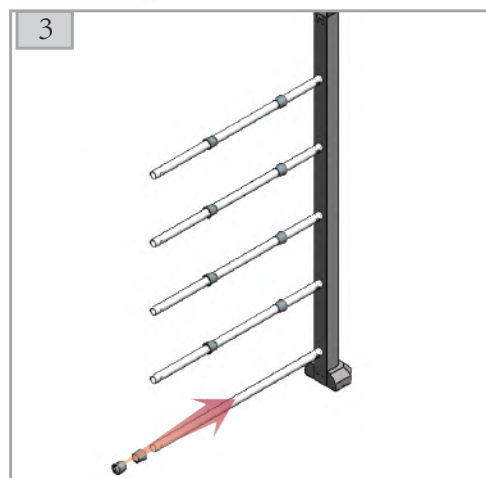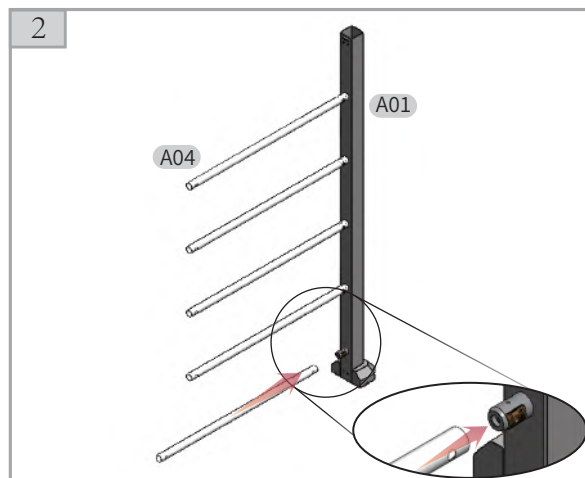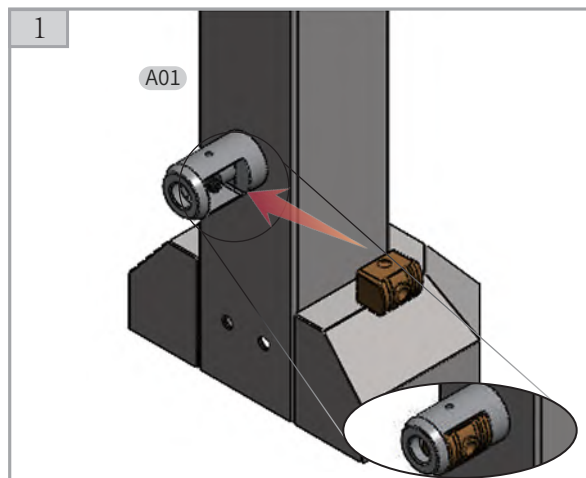


5

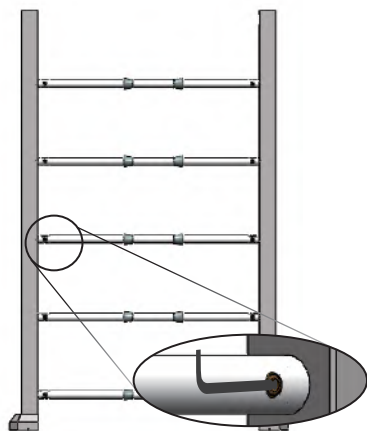


6

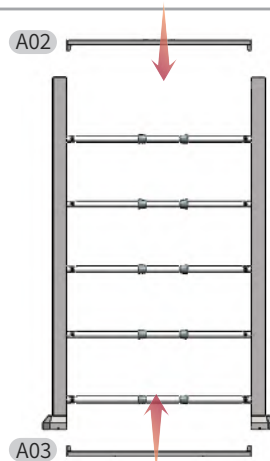


7

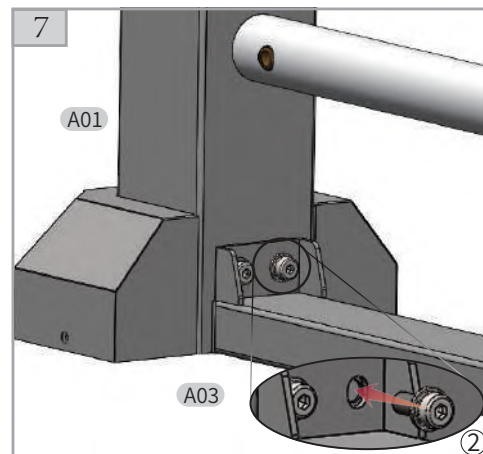


8

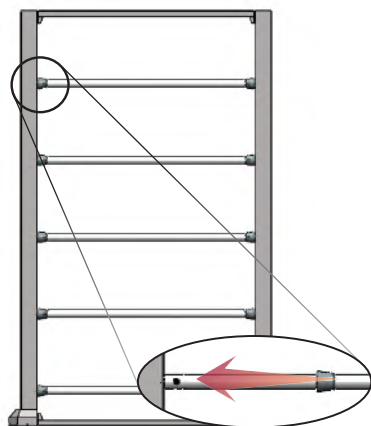

9

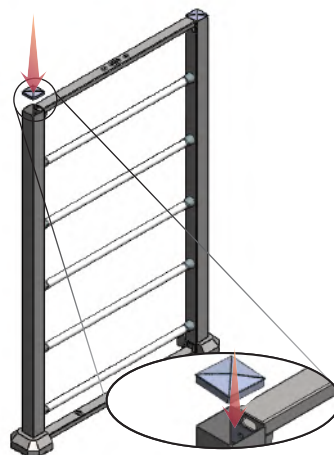

10

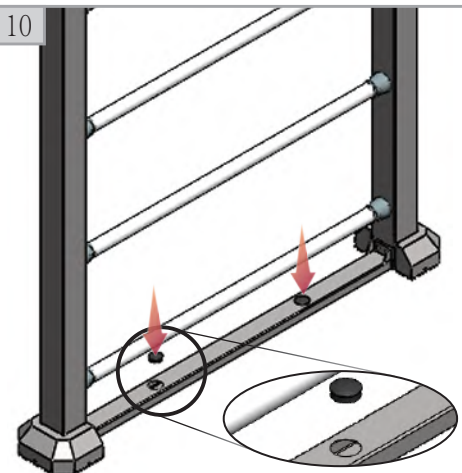

B Left/Right side fence

-  × 24 ⑤  × 16
 ③  × 24 ⑤  × 16
 ②  × 30 ⑤  × 16
 ②  × 30 ⑥  × 16
 ②  × 30  × 24

B04



× 4

B05



× 12

B01



× 2

B02



× 2

B03



× 2

B06




× 2

B07




× 2


1

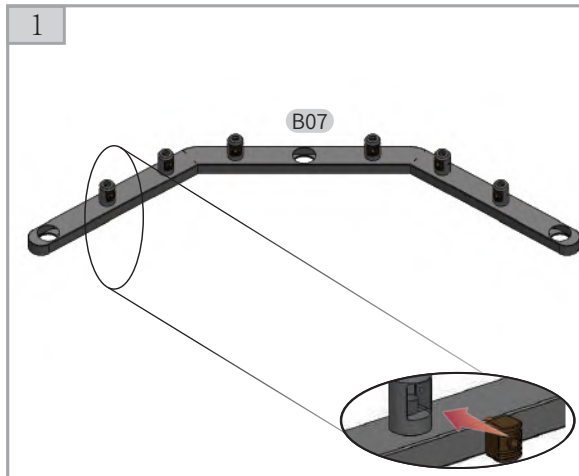


2






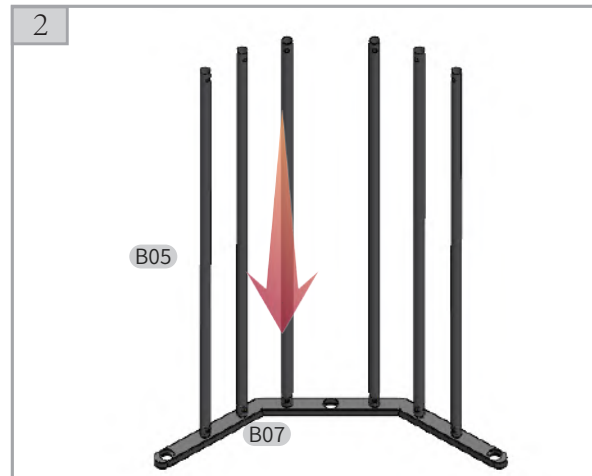





3

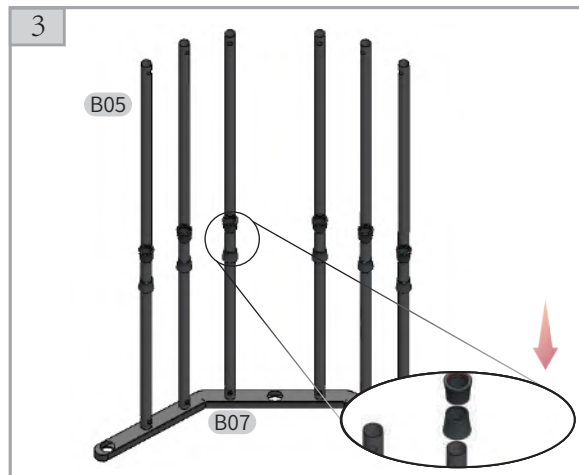

4

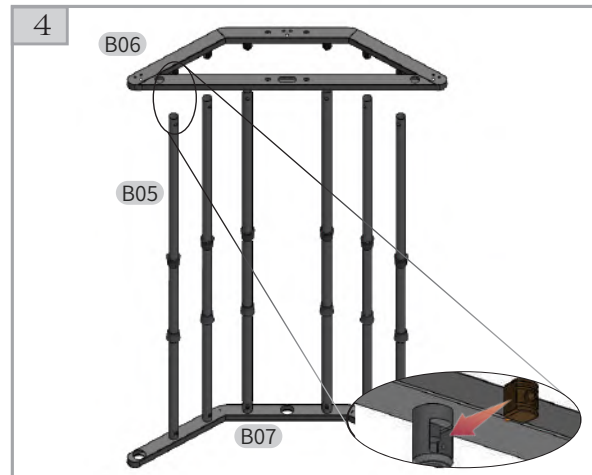

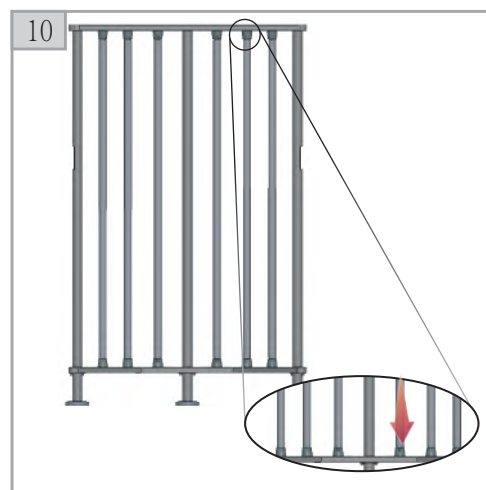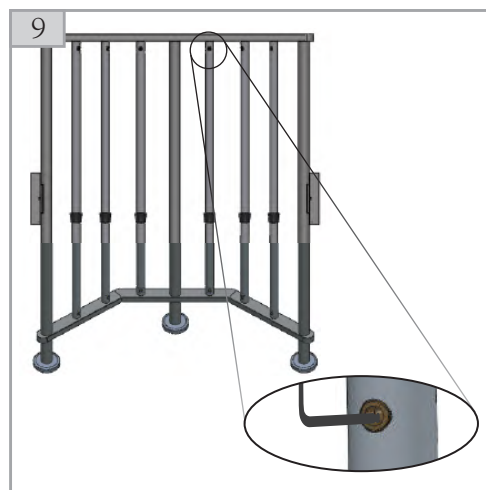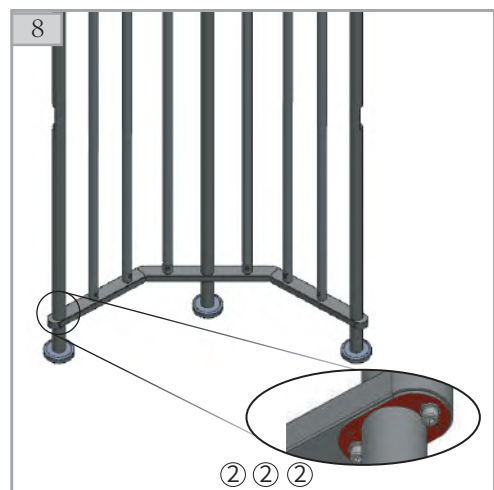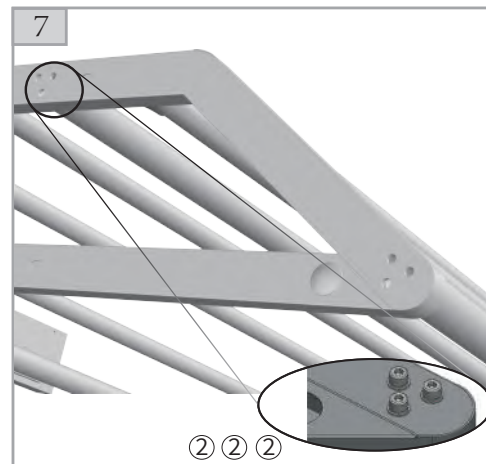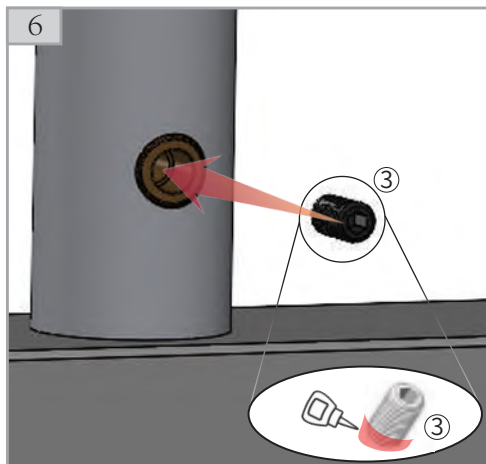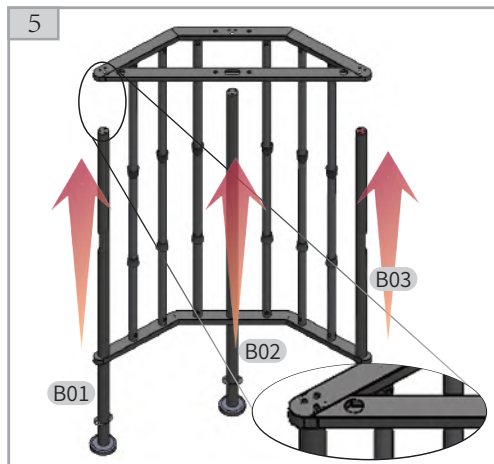

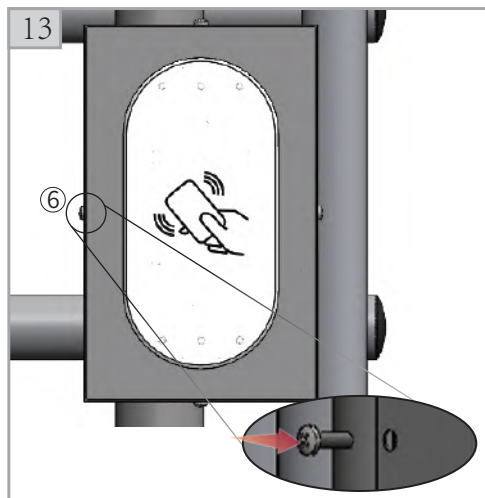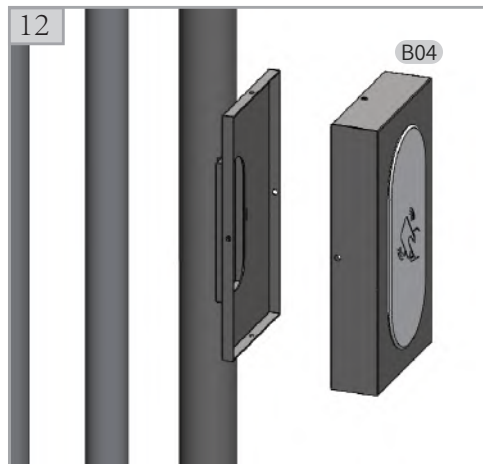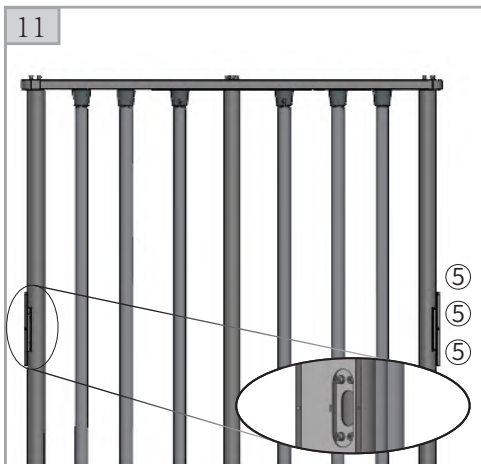





c Turning part

× 60

④ × 60

C02 × 60

C01 × 2

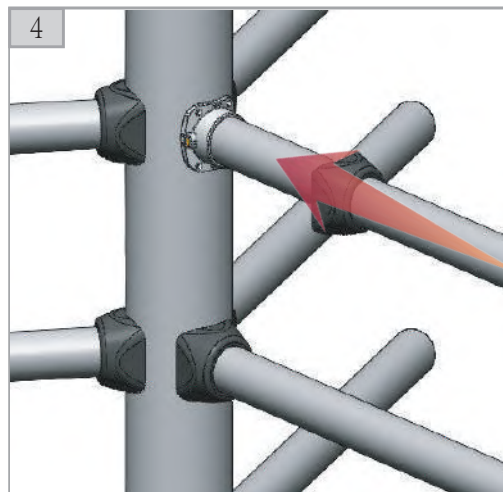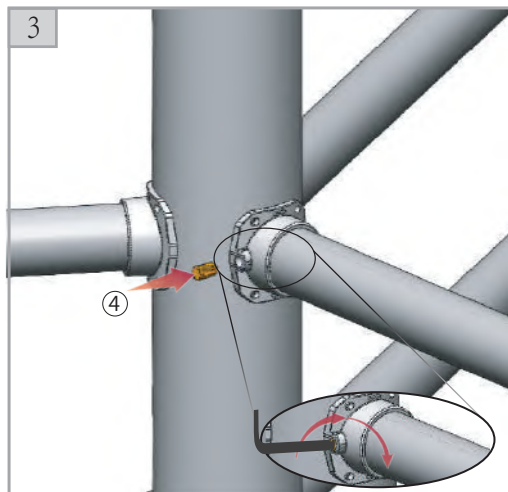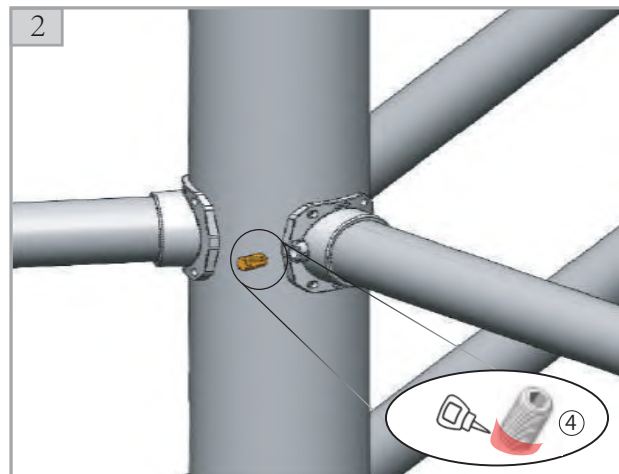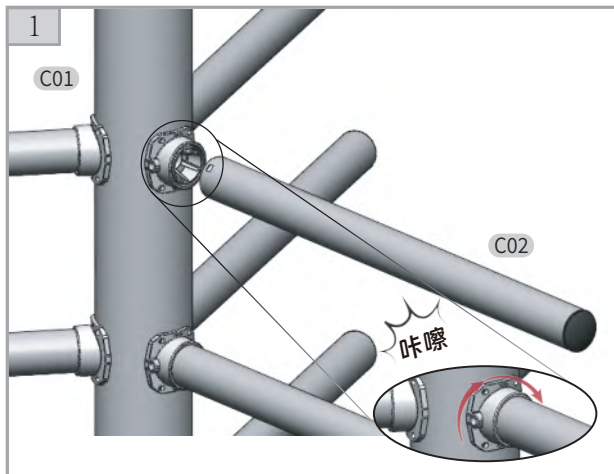

Conjoin the left side pillar and right side fence with bolts and screws



× 2



× 2



× 2



× 2

①



× 10

①



× 10

①



× 10




× 2

⑤



× 2


1

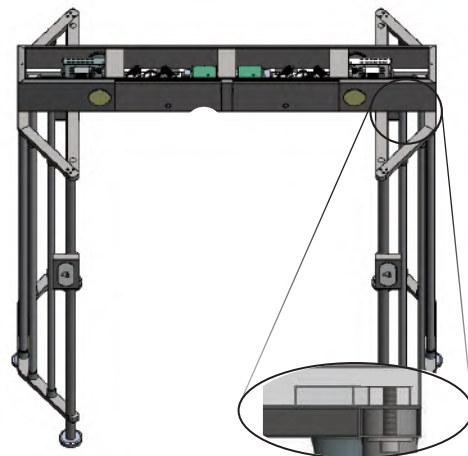


2




3

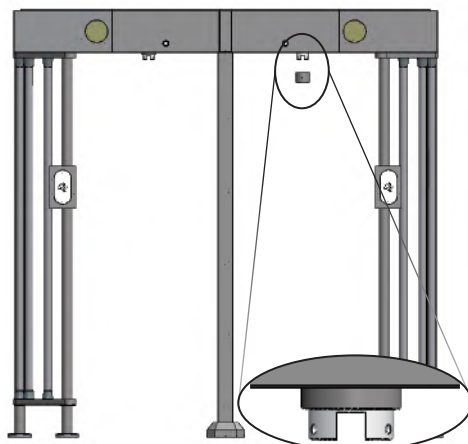


4

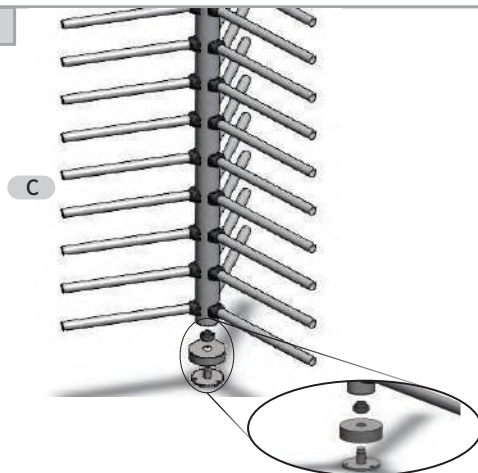


4

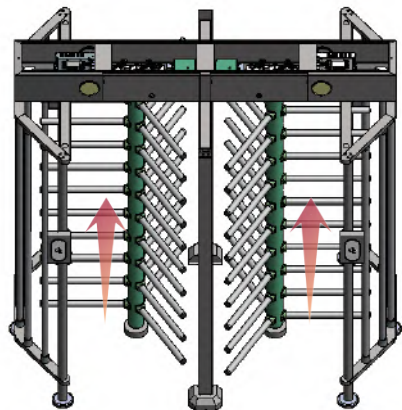


5

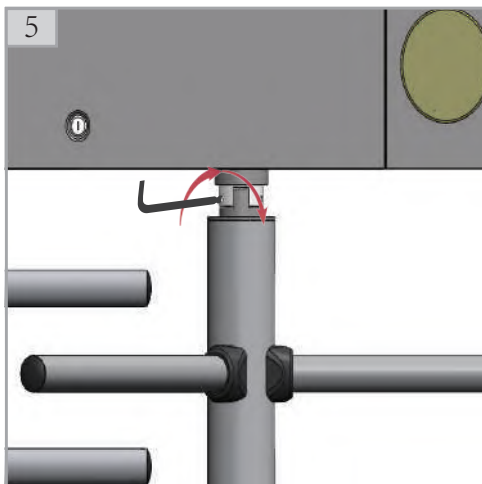



6

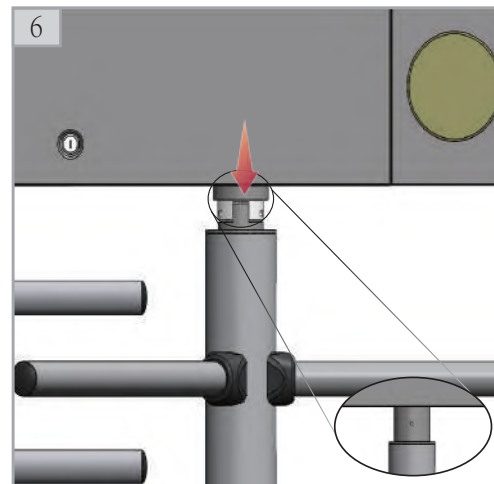





7

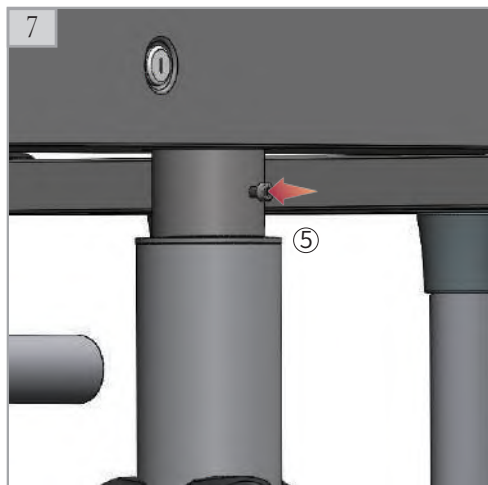

8

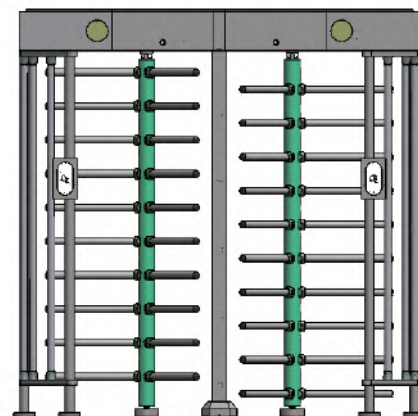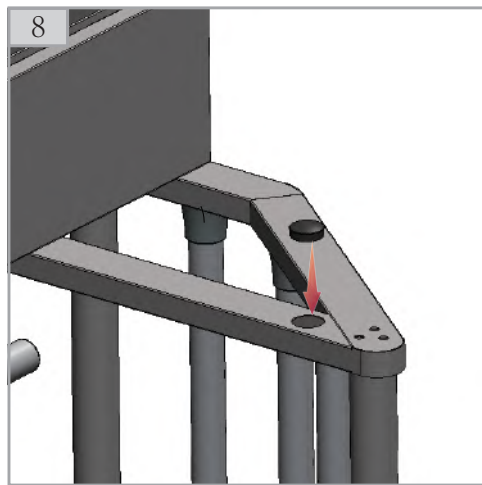

D Lift the cabinet
onto the conjoint
stands and fix with
screws and bolts

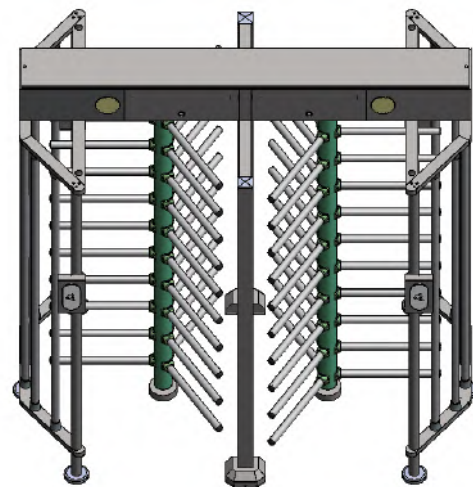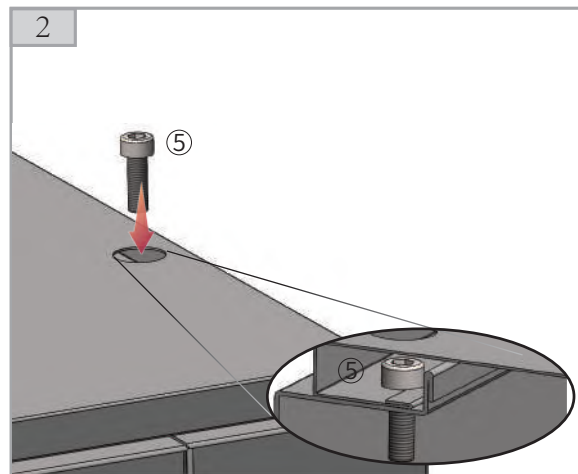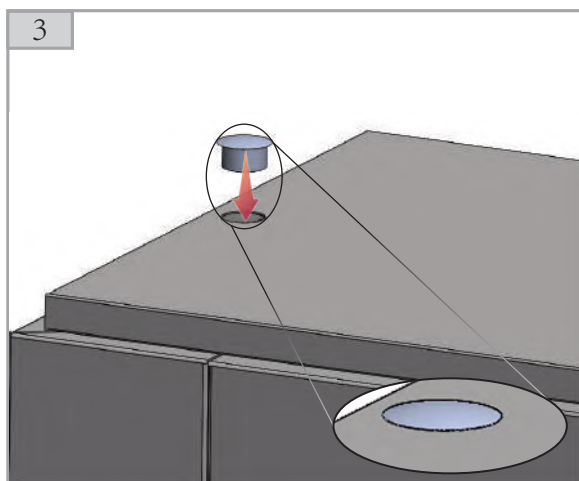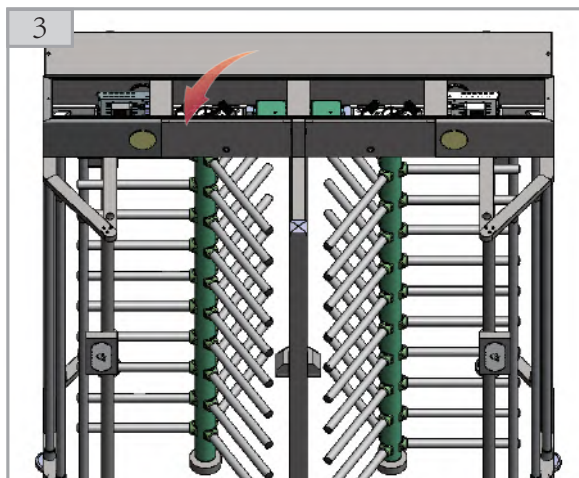

02


Installation instruction

Installation Requirement

- 1、 The ground surface where the gate is installed should be level;
- 2、 The concrete grade $\geq$ C30 (For outdoor installation);
- 3、 Concrete thickness $\geq$ 200mm;
- 4、 The ground must be frost-free and have good bearing capacity;
- 5、 The turnstile must be grounded;
- 6、 The power cord should be no less than RVV3*2.0;
- 7、 When installing, make sure the body is horizontal and the turning bar is vertical.

Installation


Bury external hexagon expansion screws

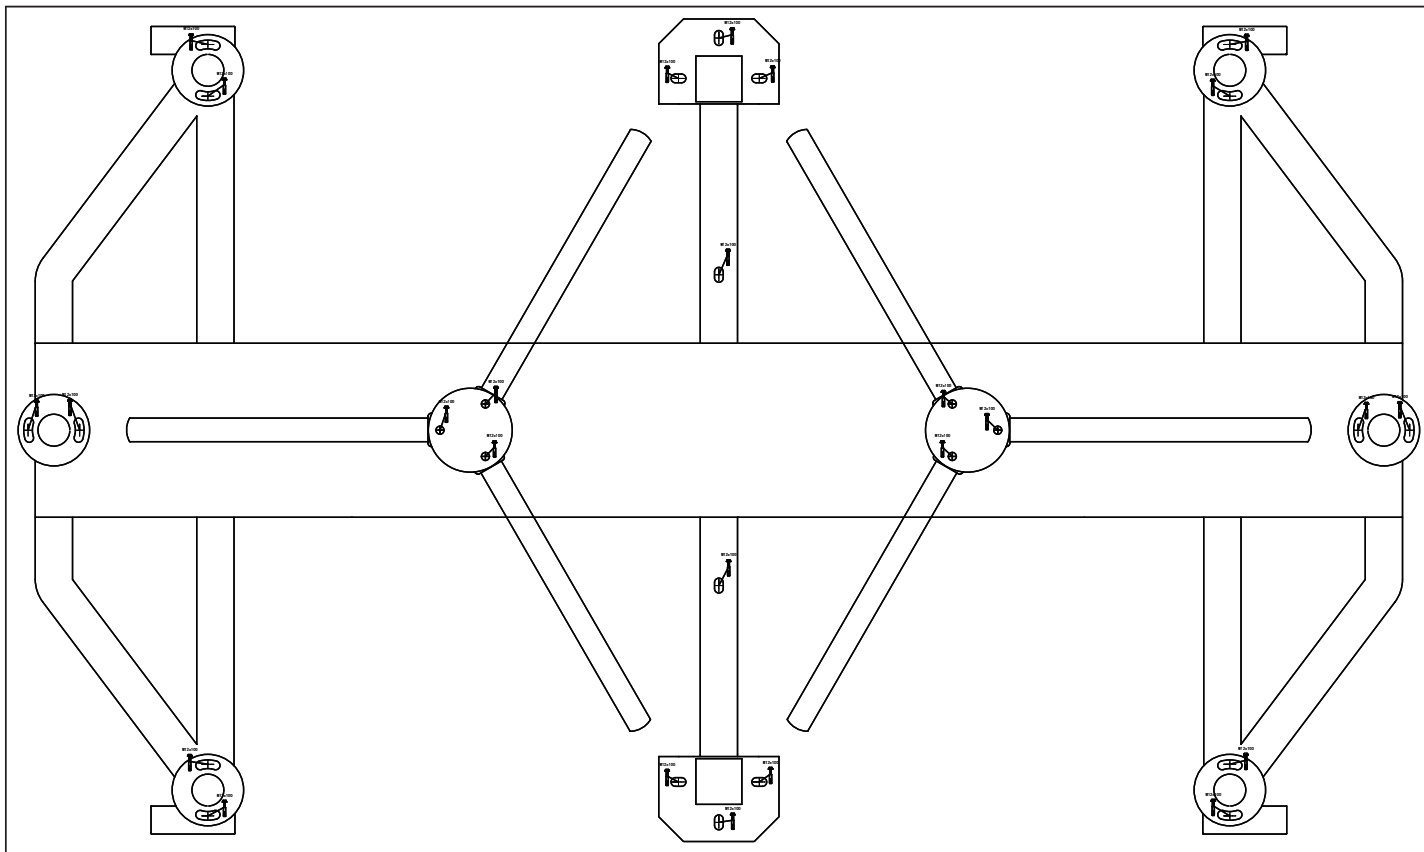


Buried wires according to wiring diagram ahead of time

(Note: This device only needs power cords. If other access control equipment is installed, wiring can be done according to actual conditions.)

Power Øwire (3 X Ø2.0mm). TCP/IP wire (8 core) card reader signal line fixed base plate

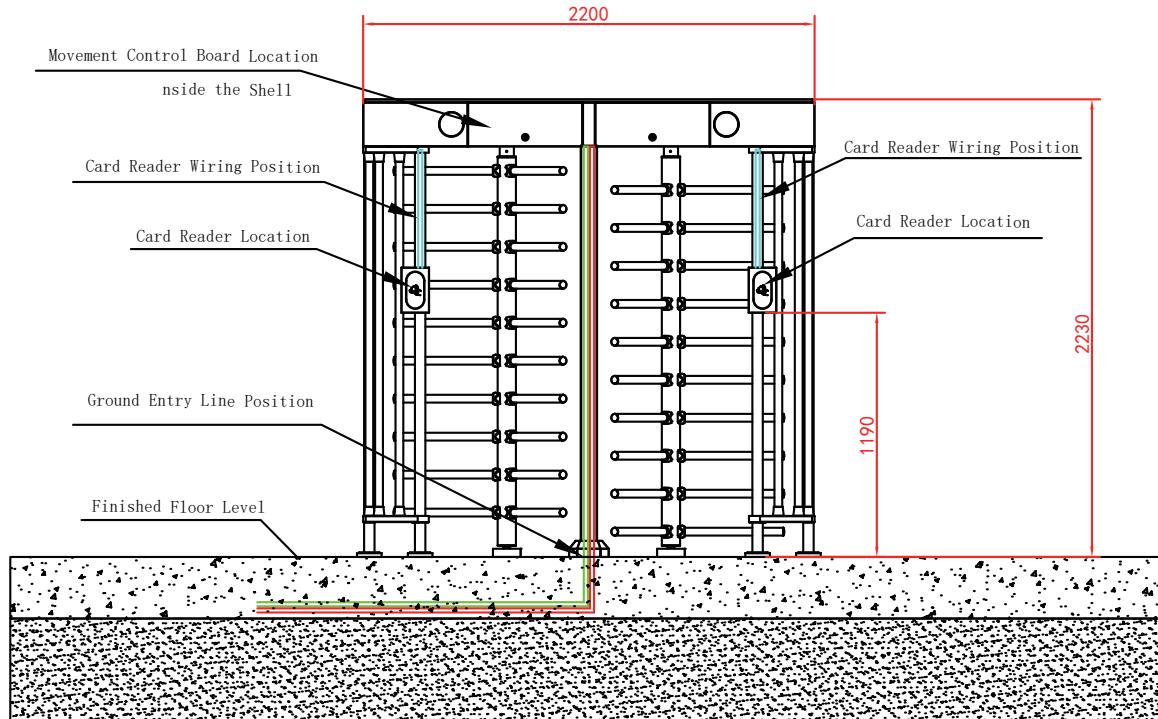

Turnatile installation and fixation

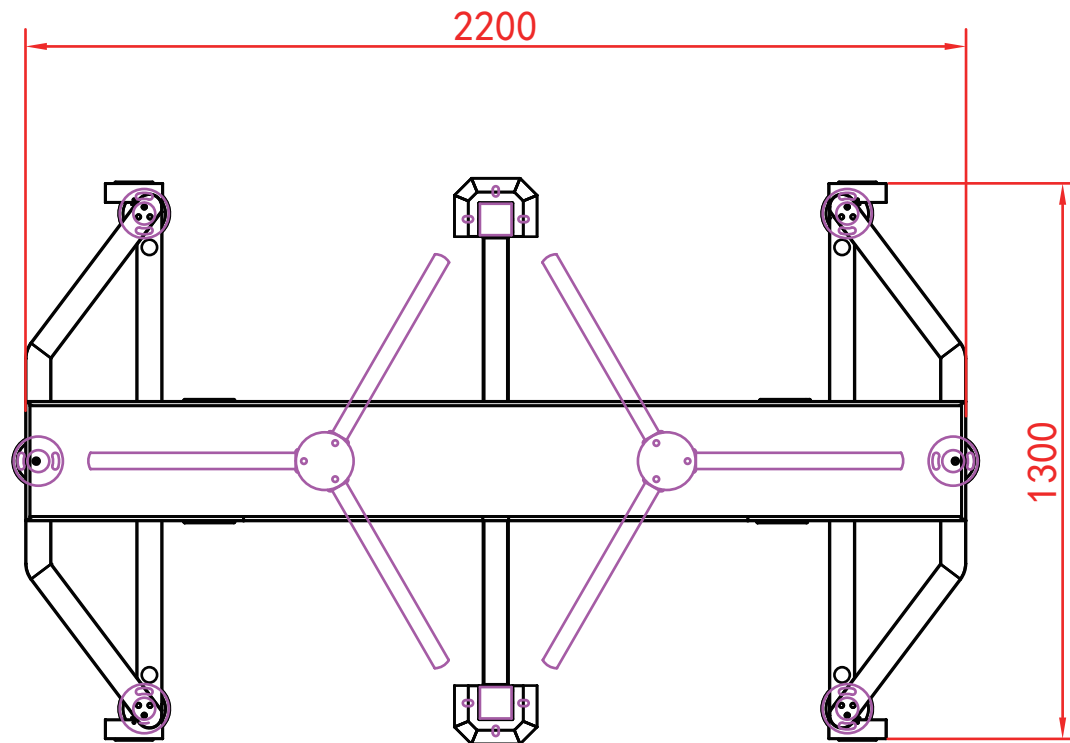

Wiring diagram

